





Slide-Away Installation Instructions

The Slide-Away is designed to be mounted on top or underneath a secure surface and ships with the required mounting bracket for either mounting style.


Slide-Away Parts Identification

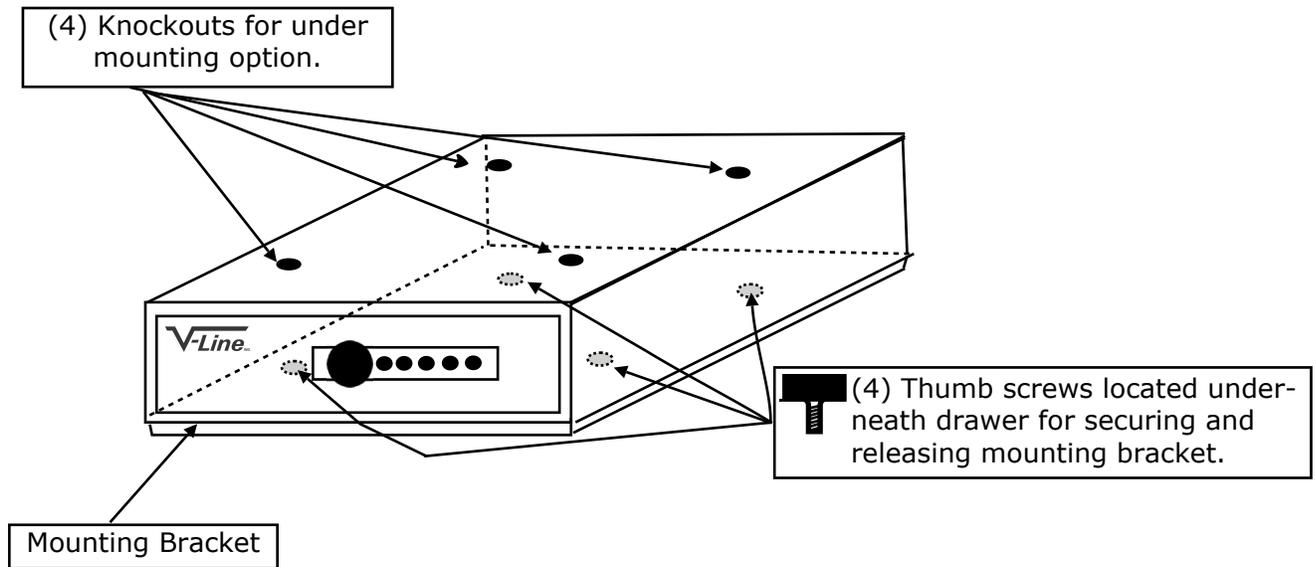

Pullout Drawer

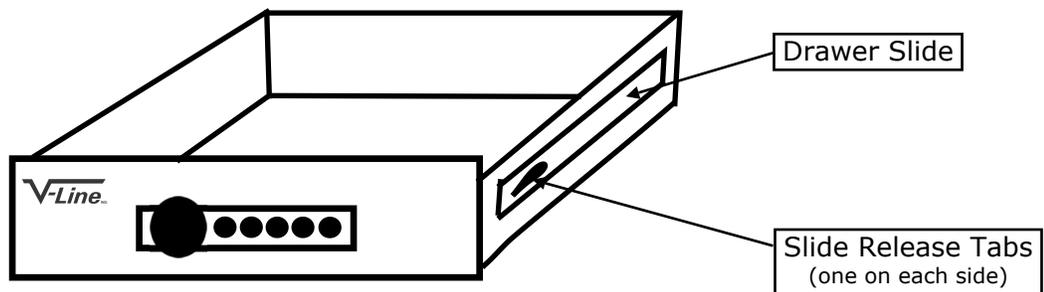


Top Surface Mounting Instructions

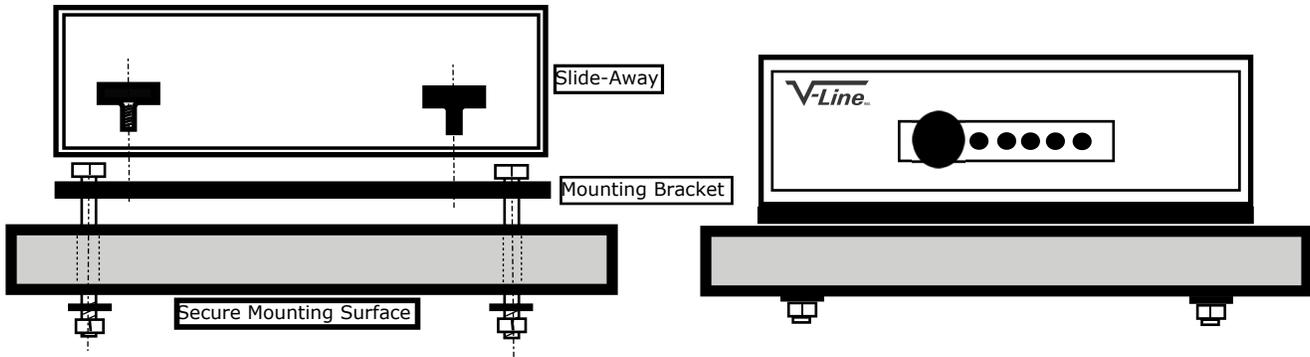

1. Remove the drawer completely out of the case's outer shell by releasing the black plastic slider tabs on the inside of the sliders.
2. Remove the mounting bracket from the underside of the case by unscrewing the 4 thumb screws located inside the bottom of the case's shell.
3. Next secure the mounting bracket to a secure surface using the four 1/4" concave holes in the mounting bracket as a template for the hole pattern to drill the appropriate sized hole for the bolt size used. We recommend through bolting with 1/4" bolts through the surface backed by large washers and nylon locking nuts (not supplied). Leave about a thread and a half exposed through the nut and after it is tightened mushroom the end of the exposed thread with a ball peen hammer to prevent removal. If this is not possible 1/4" lag bolt as long as the surface will allow can be used.
4. After securing the mounting bracket place the case's outer shell on top of the mounting bracket, align the 4 holes and reinsert the the thumb screws.
5. Reinstall the drawer carefully into the drawer slides and your Slide-Away will be ready to use.

Bottom Surface Mounting Instructions

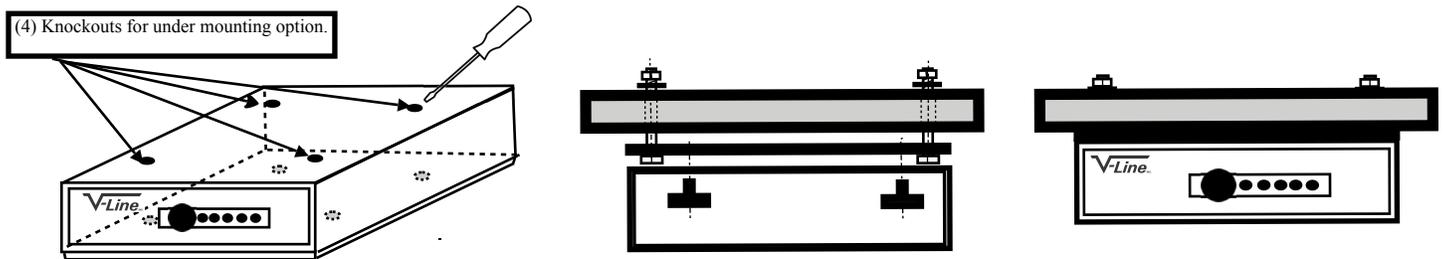

1. Remove the drawer completely out of the case's outer shell by releasing the black plastic slider tabs on the inside of the sliders.
2. Remove the mounting bracket from the underside of the case by unscrewing the 4 thumb screws located inside the bottom of the case's shell.
3. On top of the case's outer shell there are 4-1/4" knockout holes designed to accommodate the 4 thumb screws. Use a small phillips screwdriver to punch out the knock outs by placing the screwdriver on top of the knockout and gently tapping with a hammer.
4. Next secure the mounting bracket to a secure surface using the four 1/4" concave holes in the mounting bracket as a template for the hole pattern to drill the appropriate sized hole for the bolt size used. We recommend through bolting with 1/4" bolts through the surface backed by large washers and nylon locking nuts (not supplied). Leave about a thread and a half exposed through the nut and after it is tightened mushroom the end of the exposed thread with a ball peen hammer to prevent removal. If this is not possible 1/4" lag bolt as long as the surface will allow can be used.
5. After securing the mounting bracket place the top of case's outer shell on underneath the mounting bracket, align the 4 holes and reinsert the the thumb screws.
6. Reinstall the drawer carefully into the drawer slides and your Slide-Away will be ready to use.