


Notes:

Best Location

1. Choose a wall that does not have wiring or plumbing behind the drywall.
2. Use a stud finder to locate the edges of the 2x4's.
3. The distance between the 2 inner edges of the 2x4's should be approximately 14½ ".
4. The hole size to cut in the wall will be 50 ½ " x 14 ½ ".
5. Make sure the bottom line is above the baseboard a minimum of 1 ½".
6. Use a drywall saw to cut out the drywall. Remove the cutout portion of the drywall from the wall.

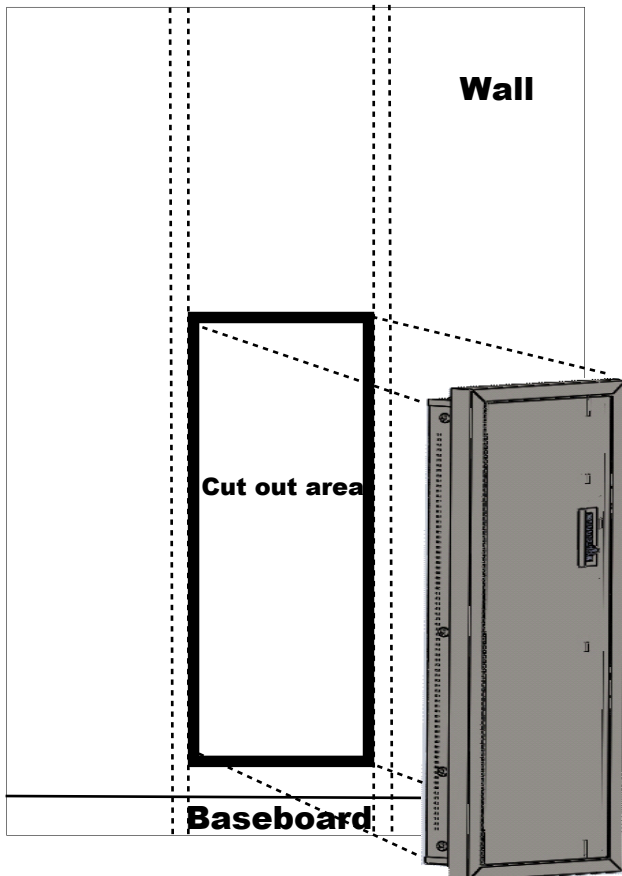

Installation:

1. After the install hole has been cut and all the excess drywall removed, insert the Closet Vault II into the cavity.
2. Open the door and drill 4 pilot holes into the 2x4's using any of the 8 predrilled holes as a guide on inside sides of the CVII using a 7/32" drill bit to accommodate the 4 supplied 1/4" lag bolts.
3. Secure the CV II by screwing in the lag bolts with a socket and a ratchet.
4. The CV II is now in place and should be flush and straight in the wall.
5. Next reprogram the lock with the directions on the reverse side of this instruction sheet.